


Spitronics - Hyperspace Software Download and Setup - Guide

Overview

This guide explains how to correctly download and install the Spitronics Hyperspace software using the official installer.

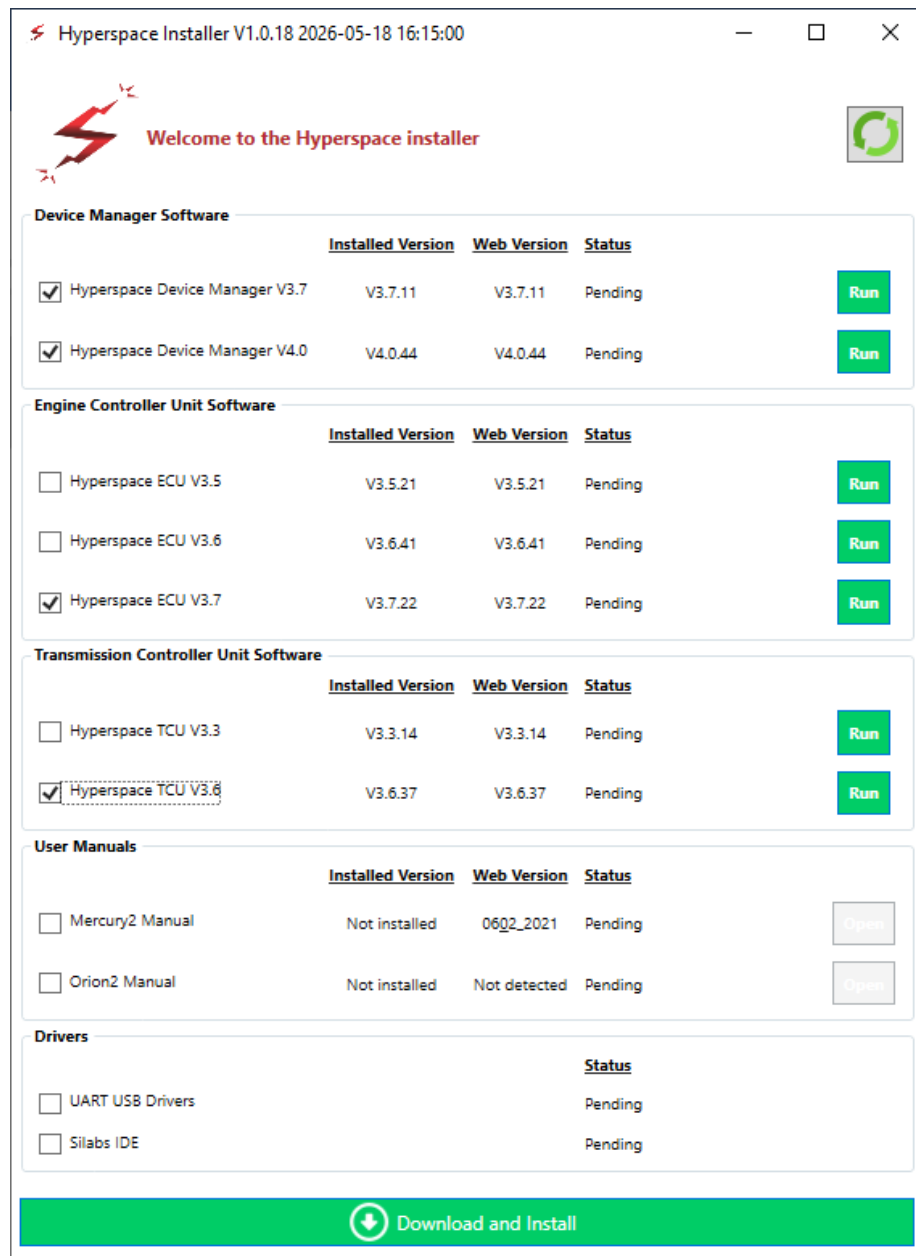

The installer manages:

- Software downloads
- Updates
- Folder structure
- USB drivers

Using the installer ensures all software versions are correct and compatible.

Step 1: Download the Installer

1. Go to <https://tree.spitronics.com>
2. Navigate to:
03 Software → Windows Software → Hyperspace Software
3. Click [Spitronics Installer](#)
4. Once downloaded:
 - Unzip the file
 - Copy it to your desktop
5. Open the installer

👉 **Each link opens a navigation tree in your browser. Close it when you're done.**

This keeps everything consistent across:

- Website
- Manuals
- Support system

On first run:

- Terms and conditions will be displayed → Click Except
 - The dashboard will open
-

Step 2: Select Software

- Select the software you want to install

👉 **Important:**

Only install the **latest revision** of each major version.

Older versions are not required.

Step 3: Download and Install

- Click **Download and Install**
- Follow the prompts


If USB drivers are not installed:

- Select the driver option
- Drivers will install automatically

Verify USB Drivers

To confirm correct installation:

1. Open Windows **Device Manager**
2. Navigate to **COM Ports**
3. Confirm the device is listed

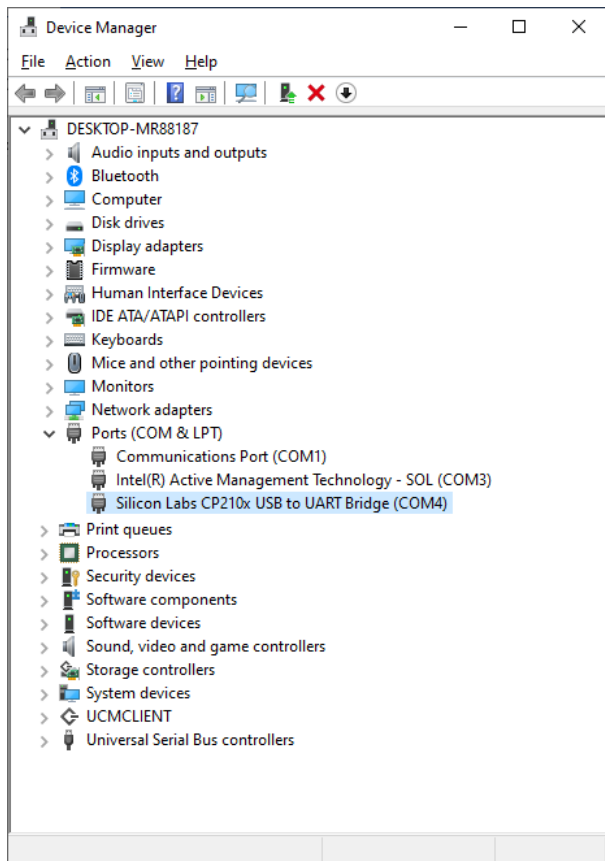

Using the Dashboard

The dashboard is your main control point:

- Launch installed software
- Check for updates
- Manage installations

👉 Always use the dashboard to open software where possible.

Updating Software

- The installer checks for updates automatically
- Software may also prompt for updates

👉 **Recommended method:**

- Close the software
- Use the **Refresh button** in the dashboard



- Install updates from there

This ensures correct installation and avoids version conflicts.

👉 If the software shows an update, close it and use the installer's Refresh button to download the latest version. Otherwise, the software may download the update every time it starts.

Folder Structure

All files are stored in:

C:\Spitronics

This includes:

- Software
- Backups
- Log files
- Maps

👉 Refer to software manuals for backup procedures.

Final Check

Once installation is complete:

- Open software from the dashboard
- Confirm communication with the ECU
- Proceed with setup and tuning