

6Cyl Full Seq High Imp Injector

Last Changed: 22/10/2025

Harness Required: M63-P3

A

B

C



D

E

F

Write your firing order from left to right in the blocks above marked with an alphabetical letter. Then write the corresponding number on the corresponding injector with the same alphabetical letter in the drawing below. Now connect your injector number to the corresponding colour wire.

Note: The order of the injectors will differ on their placing on the engine, as long as it is connected to the same colour wire as this illustration. Use the same procedure for straight 6 engines.

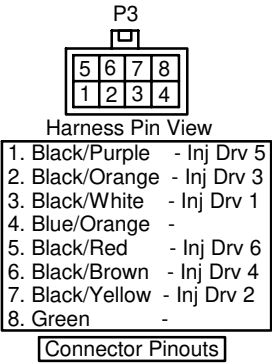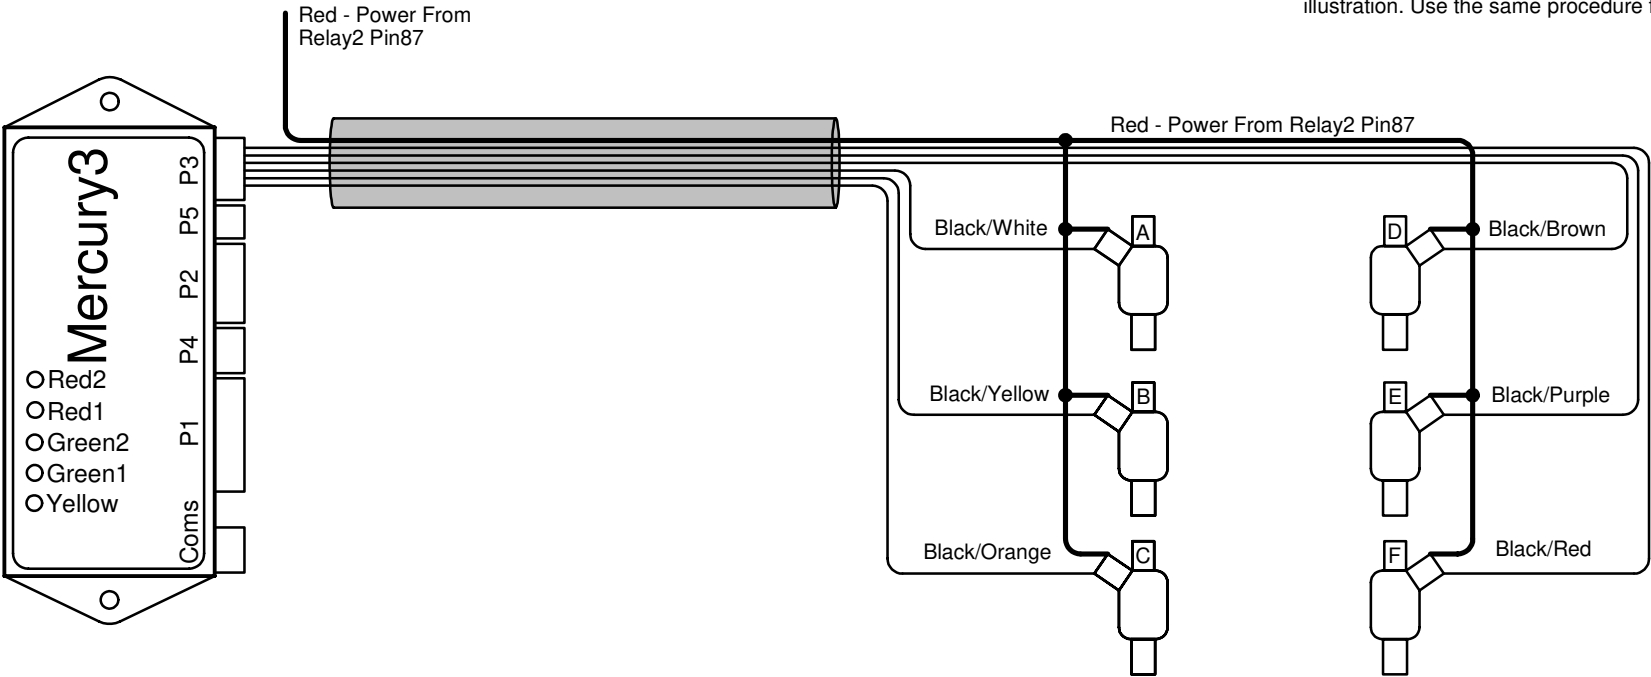

Software Settings

Injection Type

Full Sequential

Micro Fueling Type

Off