


6Cyl Split Seq Low Imp Dual Injector

Last Changed: 22/10/2025


Harness Required: M63-P3

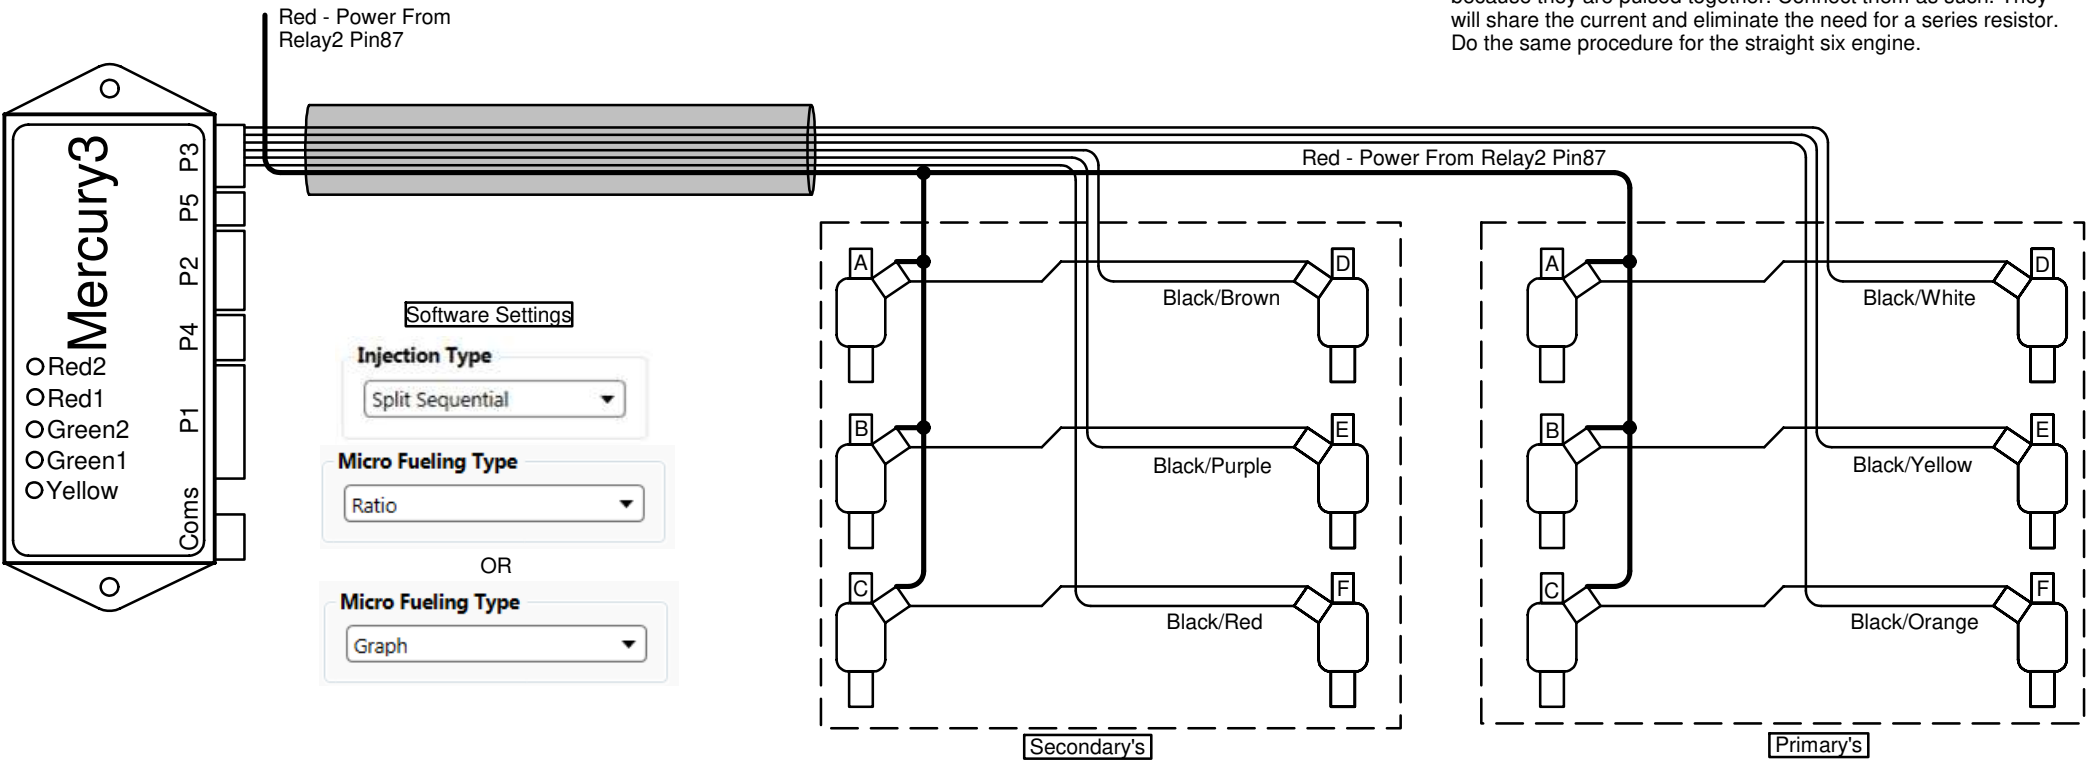

A	B	C	D	E	F

Write your firing order from left to right in the blocks above marked with an alphabetical letter. Then write the corresponding number on the corresponding injector with the same alphabetical letter in the drawing below. Do it for both sets of injectors. Now connect your injector number to the corresponding colour wire.

Note: The order of the injectors will differ on their placing on the engine, as long as it is connected to the same colour wire as this illustration. Two injectors in six pairs will be connected in series because they are pulsed together. Connect them as such. They will share the current and eliminate the need for a series resistor. Do the same procedure for the straight six engine.



Harness Pin View

- | | |
|-----------------|-------------|
| 1. Black/Purple | - Inj Drv 5 |
| 2. Black/Orange | - Inj Drv 3 |
| 3. Black/White | - Inj Drv 1 |
| 4. Blue/Orange | - |
| 5. Black/Red | - Inj Drv 6 |
| 6. Black/Brown | - Inj Drv 4 |
| 7. Black/Yellow | - Inj Drv 2 |
| 8. Green | - |

Connector Pinouts